Instructions for use

FOR THE WAY IT'S MADE.®

Safeguarding the environment 4

Important notes 5

Before using the warming drawer 6

Fitting the appliance (depending on the model) 6

Electrical connection 8

Care and cleaning 9

Troubleshooting guide 10

After-sales service 10

Safeguarding the environment

Disposal of packing material

- The packing material is 100% recyclable and is marked with the recycle symbol ♺ .
- The various parts of the packing must be disposed of in compliance with local regulations; do not disperse in the environment.

Disposal of old electrical appliances

- This appliance is marked in compliance with European Directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE).

By ensuring correct disposal of the product, the user can help prevent potentially negative consequences for the environment and the health of persons.

The symbol on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment. Scrap the appliance in accordance with local regulations on waste disposal.
For further information regarding the treatment, recovery and recycling of this appliance, contact the competent local office, the domestic waste collection service or the shop where you purchased the product.

Important notes

Important:

- The warming drawer must not be used by young children or the infirm without supervision.
- Make sure children do not play with the appliance.
- The accessible parts of the warming drawer may become hot during use; keep children away from the appliance.
- Do not use abrasive materials or substances to clean the GLASS as they may damage it.
- The appliance becomes very hot during use. Be careful not to touch the heating elements inside the warming drawer.
- The warming drawer is only intended for domestic use, for heating food or dishes (depending on the model). Other uses are not allowed. The Manufacturer declines any liability for improper use or incorrect setting of the controls.
- Any repairs or adjustments must be carried out exclusively by a qualified technician.
- Make sure the appliance is securely fixed to the cabinet with the special screws supplied.
- Do not expose the warming drawer to the atmospheric agents.
- Do not rest or sit on the drawer when open, as this will damage the telescopic slides.
- The max. load capacity of the drawer is 25kg.
- **Do not cover the bottom of the warming drawer with aluminium foil or other objects.**
- The drawer seals must be kept clean to ensure that it closes properly.
- Never pour water directly in warming drawer.
- Acidic fruit juices can leave permanent stains and 'etch' into the drawer vitroceramic surfaces. It is strongly advisable to clean the warming drawer before reusing it.
- To avoid scratching, do not drag dishes on the bottom of the warming drawer.
- Never warm food and beverages directly on the vitroceramic bottom of the drawer (depending on the model). Use suitable containers or crockery.
- If the vitroceramic surface breaks or cracks due to a violent impact (falling objects, etc.), do not use it; immediately contact the Customer Care Centre.
- Residual condensation could eventually damage the warming drawer and surrounding cabinets. It is advisable to:
  - cover food;
  - wipe the drawer dry after the drawer has cooled down.
- Do not touch the warming drawer whilst wet, or with wet hands, or use it when barefoot.
- Do not pull the appliance or the power cable to unplug it.
- **Do not allow children to touch:**
  - the controls and the warming drawer in general, especially during use and immediately afterwards, to avoid injury;
  - packing materials (bags, polystyrene, metal parts, etc.);
  - the warming drawer if it is to be scrapped.
- Make sure the electrical cables of other appliances used near the warming drawer do not touch hot parts.
- Do not keep plastic or flammable objects in the warming drawer.
  When operating the appliance these objects could melt or catch fire.
- Use the special oven gloves to remove hot dishes and heated food (depending on the model).
- Pressing the On button switches on the warmer drawer heating; risk of burns.
- Never insert objects (e.g. screwdrivers, sharp objects, papers, etc.) in the heating element and fan protection grill openings.
- This appliance is not intended for use by persons (including children) with reduced physical, sensor or mental capabilities or lack of experience and knowledge unless they have been given initial supervision or instruction concerning use of the applaince by a person responsible for their safety.

Before using the warming drawer

To open and close the drawer push the centre of the panel as shown in the figure.

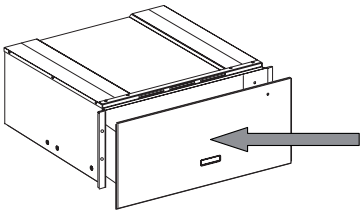

When using the appliance for the first time, clean it as follows:
- clean the surface with a damp cloth, then dry.
- Preheat the empty drawer for at least 2 hours: turn the temperature knob to the max. position or select max. temperature, in order to eliminate any manufacturing residuals (grease, oil or resins) which could cause unpleasant odours during cooking. As some of these odours can be unpleasant we advise that the kitchen is well ventilated during this procedure. After carrying out this simple operation, the appliance will be ready for first use.

Before using the appliance, remove:
- stickers on the front and warming drawer door, except the rating plate;
- cardboard protection and protective plastic film from all the aesthetic parts, if present, and from the front panel controls and other parts of the warming drawer;
- any stickers from the accessories if present.

Fitting the appliance (depending on the model)

Safety instructions for drawer installation

IMPORTANT: The drawer (applicable for both models) must be installed into cabinetry, complying with the following instructions. Do not connect the appliances to the electrical supply until they have been correctly installed into cabinetry.

Spacers: fix the drawer as shown in figures 1 or 2 (depending on the model)
Before connecting the appliance to the power supply, compare the connection data (voltage and frequency) given on the dataplate with that of the electrical mains.
The data must match, otherwise the appliance could become damaged.
In case of doubts, contact a qualified technician.
Make sure the socket can be easily accessed even after the appliance has been fitted.
The dish warmer can only be fitted in combination with other appliances not weighing more than 40 kg and provided with adequate cooling ventilation.
Otherwise, the right to the warranty is invalidated, since correct use cannot be guaranteed.
For combined appliance installation comply with the instructions given in the relevant use and installation handbook.
Fitting and installation of this appliance must only be carried out by qualified personnel who guarantee that the requirements for safe use are met.
Important: The coffee machine or the combined microwave oven, of size according to the figure on the next page and same brand, can be installed on top of the 140 drawer. For installation, carefully follow the instructions given in the handbooks supplied with the coffee machine and the combined microwave oven.

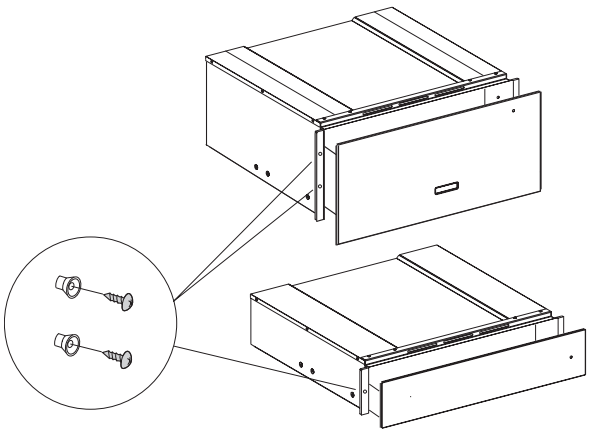

Recess measurements
The dimensions of the recess are obtained from the size of the dish warmer plus the size of the appliance combined with it.
All measurements are given in mm.

Fitting the appliance (depending on the model)

Height 140 mm

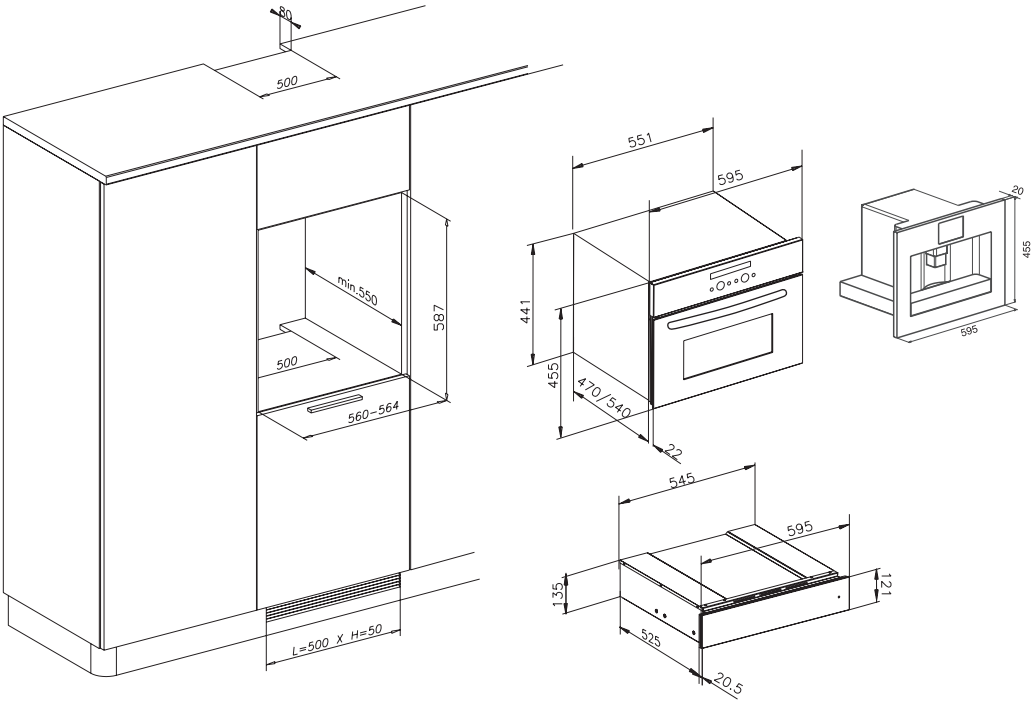

Height 290 mm

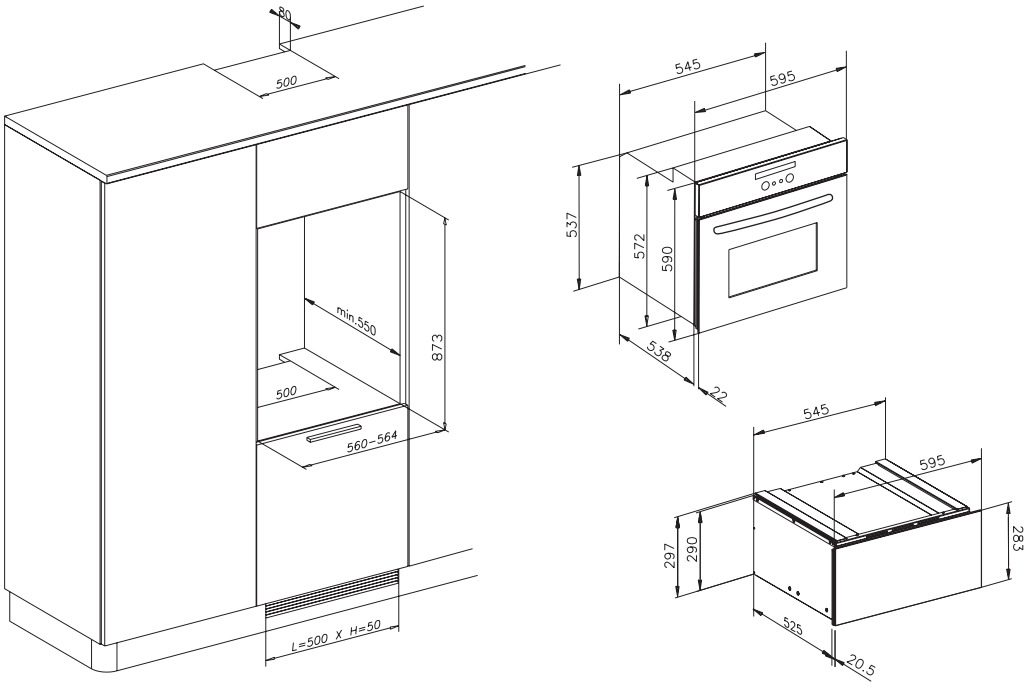

Electrical connection

Contact a qualified technician to carry out the appliance electrical connection.
Important: Before connecting the drawer to the domestic power supply to check its operation, always make sure the drawer power cable is correctly fitted and NOT squashed or caught under or behind the drawer or a combined appliance.
Important: Power cable replacement must be made with a cable having the same characteristics as that supplied by the Manufacturer (type H05RRF, 3x1 mm2 or higher) and carried out by the After-Sales Service or a qualified technician.
Before connecting the appliance to the power supply, make sure that the technical specifications (voltage: V and frequency: Hz) given on the rating plate match those of the power mains.
In case of doubt, contact a qualified technician.
If the plug is removed from the power cable, contact a qualified technician for fitting and connecting the appliance. Contact an electrician aware of the local regulations and the electricity company's regulations, ensuring that the work is carried out in compliance with the same.
Important: Make sure the appliance is connected to an approved earth wire, to guarantee electrical safety. If necessary, have the system checked by a specialised technician.
The Manufacturer declines any liability for injury and damage due to the lack or interruption of the earth wire.

Important: The earth connection is compulsory by law.

If the appliance is connected to the power supply by means of an extension cord, make sure the cord and connection are insulated against moisture.
The appliance is designed to be used only when correctly fitted.
Never open the appliance casing. In case of contact with live wires or if the electrical and mechanical structure of the appliance is modified, an appliance fault may occur when it is used.

If the installation, maintenance or repair works are not carried out correctly, there may be risks for the user. The Manufacturer declines any liability for damage or injury in such cases.

During the warranty period, repairs must only be carried out by the authorised technical service, otherwise the warranty right is lost.

Installation, repair and cleaning operations must only be carried out after ensuring that the appliance is disconnected from the power supply.

The appliance is disconnected from the power supply in the following cases:
- the electrical system main switch is turned off.
- The safety switch is turned off.
- The appliance is unplugged.

Grip the plug and not power cable to unplug the appliance.

It is advisable to connect the appliance to the power supply by means of a socket;
this will facilitate technical assistance operations, if necessary.
Ensure that the socket is accessible even once the appliance has been fitted.
If connection is not made by means of an electrical socket, contact an electrician aware of the local regulations and the electricity company's regulations,
ensuring that the work is carried out in compliance with the same.
If the socket is no longer accessible after fitting the appliance or if a fixed connection is provided for, a separation device for each pole must be arranged by the installer.
Switches with contact opening of at least 3mm are valid separation devices.
The specifications necessary for connection are given on the dataplate. These specifications must match those of the power supply.
The Manufacturer declines any liability for injury or damage due to incorrect installation, improper, wrong and unreasonable use of the appliance.
The manufacturer also declines any liability for damage (e.g. electric shock) caused bythe lack of, or interruption of the earth wire.
After installation, all the parts of the appliance must be insulated, to prevent accidents during operation.

Care and cleaning

Important: Never use high pressure water or steam cleaners.
Also, do not use: detergents containing soda, acids or chlorides, abrasive detergents (in powder or lotion), abrasive sponges (e.g. steel wool) or sponges containing residuals of abrasive detergents, descaling detergents, dishwasher detergents, oven sprays.

Warming drawer exterior
- Clean with a damp cloth. If it is very dirty, add a few drops of dish washing detergent to the water. Dry with a dry cloth.
- Do not use corrosive or abrasive detergents, as they can create dull areas.
  If any of these products accidentally comes into contact with the warming drawer, immediately clean the appliance with a damp cloth.
- Slight colour differences on the front of the appliance are due to the use of different materials, such as glass, plastic and metal.

Aluminium front panel (depending on the model)
- Use a mild detergent and a soft window cleaning cloth or a microfibre cloth that does not leave fibres on the surface. Wipe horizontally, without pressing.
- Do not use corrosive products, hard sponges or rough cloths for cleaning. Clean the aluminium surfaces with a dry cloth.

Antislip drawer base (depending on the model)
- The antislip drawer base can be pulled out to clean the bottom of the drawer.
  The base can be washed by hand with hot water and a mild detergent. Dry thoroughly. Refit the antislip base in the drawer only when completely dry.

Vitroceramic drawer base (depending on the model)
It is advisable to clean the bottom of the drawer after every use, making sure to allow it to cool. In this way grime will not accumulate and cleaning is easier.
- Use a clean cloth, absorbent paper and dish hand-wash detergent, or specific products for cleaning the vitroceramic top.
- Remove stubborn cooking grime with specific products.
- Remove any food residuals left on the vitroceramic top; do not leave to harden.
- Foods with a high sugar-content (coffee, fruit juice, jam, etc.) that have boiled over or any sugar stains due to cooking must be immediately removed.
- Do not use abrasive products, bleach, oven cleaning sprays or steel wool.

It is advisable to periodically treat the vitroceramic with the special waxes available on the market.

Troubleshooting guide

If the dishes or food (depending on the model) are not warm enough, make sure:
- the appliance is on
- the right temperature has been set
- the heat openings are not covered by large dishes or soup-plates
- the dishes have been warmed for a long enough time.

Different factors affect the warming time, e.g.:
- the material and thickness of the dishes, the load amount and its arrangement, temperature setting.
- Optimum dish warming times are subjective. Therefore we suggest that trials are conducted with your crockery to discover these timings.

After-sales service

Before calling the Customer Care Centre:
1. Try to solve the problem on your own, according to the points described in "Troubleshooting Guide".
2. Switch the appliance off and then on again it to see if the problem has been eliminated.

For the following problems, contact the Customer Care Centre.
If the dishes are not warmed, make sure:
- the main power switch is on;
- the power cable is not disconnected or damaged.

If the dishes become too hot:
- the temperature controller may be faulty.

The On/Off switch does not light up when the appliance is switched on:
- the switch control light is faulty.

If the fault persists after the above checks, contact the Customer Care Centre.
Always specify:
- a brief description of the fault;
- the type and exact model of the warming drawer;
- the Service number (number after the word Service on the rating plate), located on the outer right edge of the drawer slide. The service number is also indicated on the guarantee booklet;
- your full address;
- your telephone number.

If any repairs are required, contact an **the Customer Care Centre** (to guarantee the use of original spare parts and correct repair).
Failure to comply with these instructions may compromise the safety and quality of the product.

DECLARATION OF CONFORMITY CE
- **This drawer is designed to come into contact with food products and complies with EEC (CE) Regulation n. 1935/2004.**
- **This appliance is designed for use only as an appliance for warming or keeping cooked food or dishes warm.**
  Any other use (e.g. for room heating) is considered improper and therefore potentially dangerous.
- **This appliance has been designed, manufactured and marketed in compliance with:**
  - **Safety objectives of the "Low Voltage" Directive 2006/95/CE (which replaces 73/23/CEE and subsequent amendments);**
  - **The protection requirements of "EMC" Directive 89/336/EEC;**
  - **the requirements of Directive 93/68/EEC.**

Electrical connection for Great Britain and Ireland only

Warning - this appliance must be earthed

Fuse replacement
If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:
1. Remove the fuse cover (**A**) and fuse (**B**).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:
The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.
Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.
Replacement fuse covers are available from your local electrical store.

For the Republic of Ireland only
The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

Socket outlet / plug (valid for both countries)
If the fitted plug is not suitable for your socket outlet, please contact KitchenAid Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified technician in compliance with the manufactures instructions and current standard safety regulations.

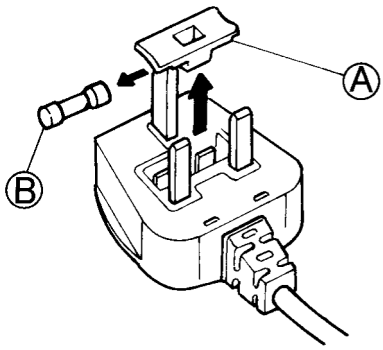

Printed in Italy
11/09

5019 744 02023/A

GB